



RTA 4-WAY WINGS ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



#2 Phillips Screwdriver



Rubber Mallet



Cordless Drill (Optional)

BASE KIT CONTENTS



(4) Wing Panels



(12) Confirmat Screws



(12) Screw Caps

ASSEMBLY

PANEL INSTALLATION

NOTE: Assemble the base kit first, then position it to accept the 4-way wings.

1. Make sure the (4) wooden dowel pins are inserted into the base top by tapping them into position with a rubber mallet. (See Figure 1)
2. Assemble 4-way display panels onto base. (See Figure 2)

NOTE: Strongly recommended for two people to complete steps 3 through 5.

3. Install two panels together onto the dowel pins. Locate the holes on the bottoms of the panels and set them onto the dowel pins. (See Figure 3)
4. Attach the panels together by installing the confirmat screws into pre-drilled holes using a cordless drill or #2 Phillips screwdriver.

NOTE: Do not fully tighten screws until all the panels are in place. Once both wing panels are together and in place, tighten and snug the screws.

5. Set the center panel and wing assembly onto the base over the camlock pins and tighten into place.

SCREW CAPS ADHESION

1. To cover the exposed screw heads, adhere the decorative screw caps.
2. Peel the decorative screw caps to expose the sticky back, and carefully center and cover the screw and cover the screw heads. (See Figure 4)



Watch Assembly Video
<https://www.youtube.com/watch?v=vGb9amjq-6E>

Figure 1

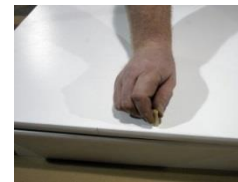



Figure 2



Figure 3



Figure 4

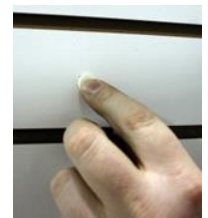

___ HARDWARE
___ CASTERS
___ INSTRUCTIONS
___ INITIALS
___ MONTH/DAY