

CUBEwall™ Installation Instructions


1. Determine location where panels will be installed. Use a level to draw a straight line at desired height.
2. When installing over drywall use a stud finder to mark the center of each stud on the pre drawn level line.
3. Use correct length screws to attach panel to the wall, drilling through the grooves (see Illustration A below). Due to the uniqueness of each installation, **fastening screws are not included.**
4. If cutting is required, cut wall panels with a power saw. The saw blade should enter the finished side of the wall panels (back side of board is facing up).

➤ Special Note


1. CUBEwall™ is intended for medium and light weight use. Do not overload CUBEwall™ grooves.
2. Clean with damp soft cloth limiting water and harsh chemicals.

Illustration A →


Install standard drywall screws through the back of the grooves (**fastening screws are not included**)

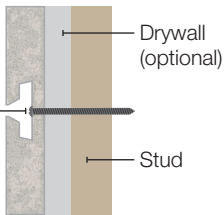


8" on-center, stock cut (horizontal)

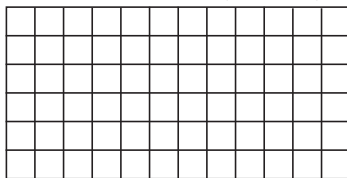


8" on-center, stock cut (vertical)

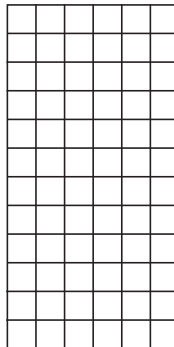

6" on-center, stock cut (horizontal)

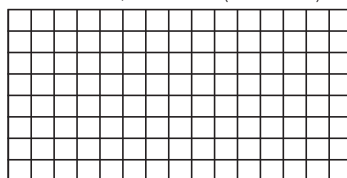

6" on-center, stock cut (vertical)

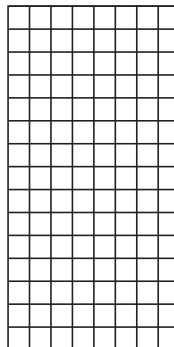

Accessories

Accessories provide the ability to create personalized organization providing a simple way to arrange and rearrange products. Use shelves, baskets, and various hooks to meet your organizational needs.

For more information visit:
<http://www.windmillslatwall.com/SlatwallAccessoriesRetail.html>



Go to website
to see accessories



Necessary Tools

- Safety goggles
- Tape measure
- Stud finder
- Level
- Standard drywall screws
- Drill (screw gun)

Safety First

Use all tools according to the manufacturer's recommendations.

Dos and Do Nots

- DO distribute weight equally on the panels.
- DO use tools per manufacturer's recommendations.
- DO NOT climb, hang, or step on accessories.
- DO NOT overload accessories with additional weight.
- DO NOT drop heavy items on accessories.